



Cleaning and Maintenance

Tiles around pool surface and scum gutters should be cleaned with a commercial cleaner and cloth at least once per week.

The pool floor/ interior should be vacuumed at least once per week and more frequently in dusty conditions, periods of heavy use or when there is a black spot problem.

The concourse should be hosed as needed and disinfected with a dilute (20:1) hypochlorite mix at least once a week.

Shower blocks, toilets and change rooms should be hosed and disinfected with a commercial disinfectant or a 20:1 hypochlorite mixture at least twice per week.

The plant room should be kept tidy, floors clean of spilt chemical and chemicals safely stored.

Pumps and equipment should be kept free of dirt, surface grease or spilt chemical residues.

Corrosion should be controlled by applying protective coatings where possible.

Once a day operators should inspect the pool and plant room carefully looking for potential hazards such as loose tiles, sharp objects or dangerous fittings.

The lint filter and skimmer basket should be cleaned at least twice per week.

The valves of the chemical dosing pumps should be dismantled and cleaned with hot water when necessary. This will probably be required about once per month. The valves should be reassembled correctly.

When the pressure valves or loss of head gauge indicates it is necessary, the filter should be backwashed until the water is clean. This will be required on average about once per week.

For further assistance or service please do not hesitate to call!

This document and the information herein is the property of ALIAS Pty Ltd and are subject to copyright. Reproduction in part or in full is only allowed by written consent from ALIAS Pty Ltd. © 2005